

Left or Mod Button Functions

Dual Rapid Fire – Rapid fire on both triggers independently. (hold left trigger)

Burst Fire – Programmable burst fire for semi-automatic weapons.

GOW Active Reloads – Have perfectly timed active reloads in GOW automatically.

Jitter – Turn any weapon full auto, even 3-round burst and shotguns.

Auto Sniper Breath – Automatically hold your breath when aiming down sights.

Drop Shot – Drop down to prone automatically as soon as you start to fire.

Jump Shot – Jump automatically when you fire.

Left Button – Double tap to turn on rapid fire. Hold in combination with other controller buttons to turn on/off features.

Mod Button – (Optional) Located on the back of the controller under the right thumbstick. Use for turning rapid fire and other controller features on/off.

UP or Alt Button Functions

Quick Scope – Scope and fire automatically at the fastest possible time. (hold left trigger)

Fast Reload – Shave precious milliseconds off your reload time.

Mimic – The right trigger controls the left trigger. (hold right trigger)

GOW Set reload weapon
Select the weapon you want to use for the perfect active reloads.

Auto Run – Run without needing to click the left thumbstick.

Auto Aim – Auto lock on your target while aiming down sights.

UP Button – Used for changing additional controller features.

Battlefield Auto Spotting – Spot targets automatically without needing to press the RB button.