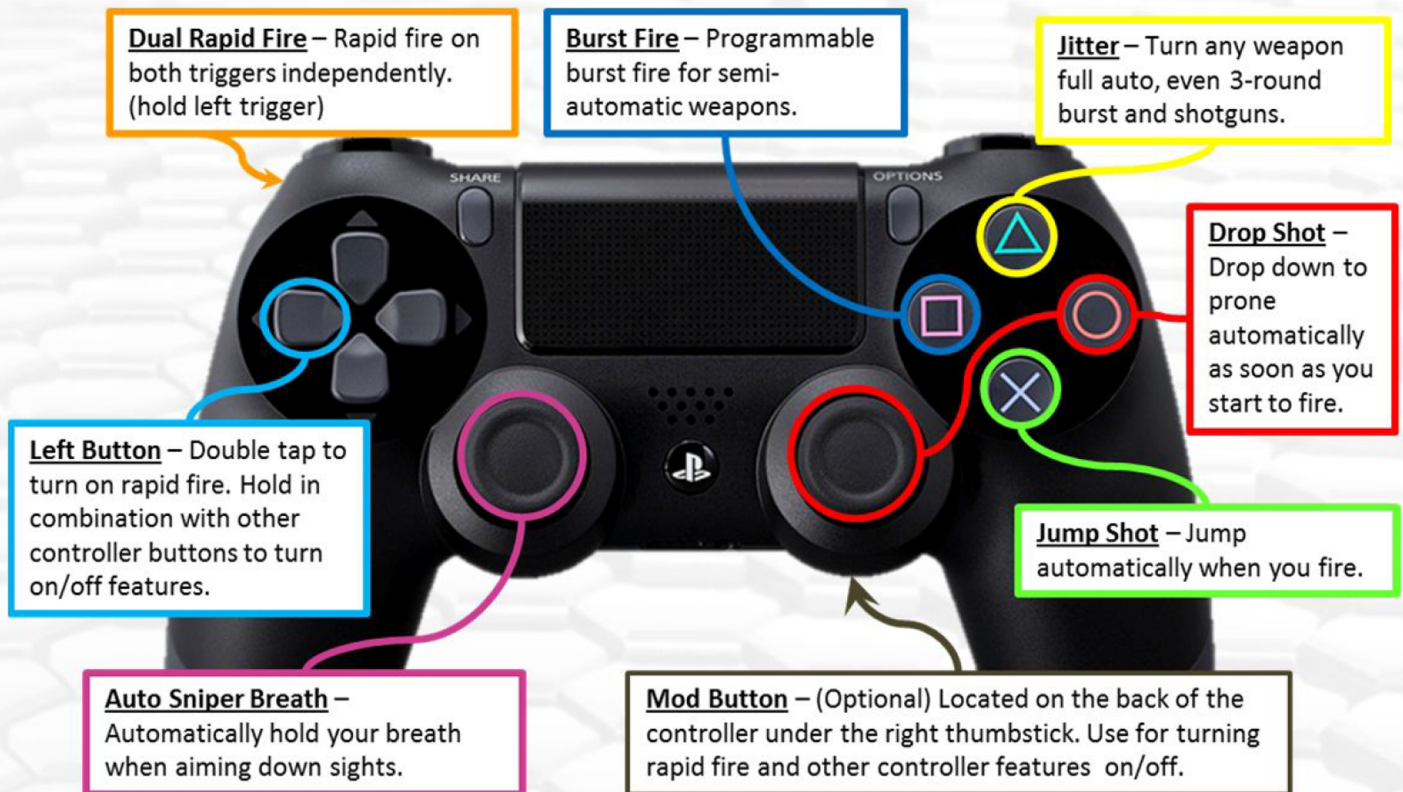# GAMER ICON.com

Left or Mod Button Functions

The following functions are controlled by holding the indicated controller button and then tapping the mod button on the back of the controller.

Dual Rapid Fire – Rapid fire on both triggers independently. (hold left trigger)

Burst Fire – Programmable burst fire for semi-automatic weapons.

Jitter – Turn any weapon full auto, even 3-round burst and shotguns.

Drop Shot – Drop down to prone automatically as soon as you start to fire.

Left Button – Double tap to turn on rapid fire. Hold in combination with other controller buttons to turn on/off features.

Jump Shot – Jump automatically when you fire.

Auto Sniper Breath – Automatically hold your breath when aiming down sights.

Mod Button – (Optional) Located on the back of the controller under the right thumbstick. Use for turning rapid fire and other controller features on/off.

Touchpad Button Functions

The following functions are controlled by holding in the Touchpad click, then tapping the indicated controller button

Quick Scope – Scope and fire automatically at the fastest possible time. (hold left trigger)

Fast Reload – Shave precious milliseconds off your reload time.

Mimic – The right trigger controls the left trigger. (hold right trigger)

Battlefield Auto Spotting – Spot targets automatically without needing to press R1.

Auto Run – Run without needing to click the left thumbstick.

Touchpad Click – Used for changing additional controller features.

Auto Aim – Auto lock on your target while aiming down sights.